

Installation Guidelines


Step Row Indicator Fitting Instructions

Data Sheet: (sheet 1 of 2) 25/11/2013

Fitting Details

The row indicators are designed to be fitted into carpet; usually they are fitted in the corner of the step edging and the cable management system, next to the seat, each side of the step.

Take care to avoid placing the row indicator in the middle of a row where it will cause confusion and sustain more damage.

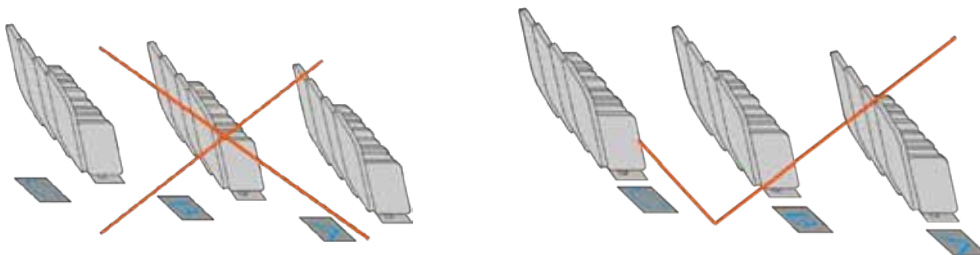

1. Cut a 67mm square hole in the carpet and underlay



2. Draw the IAV led strip from the endcap areas, under the carpet to the hole



3. Use an adhesive suitable for the substrate



4. Pull the IAV led strip through the nearest cut out on the corner of the row indicator base



5. Fix the base to the floor.
NB, **ensure the base is correctly orientated, the embossed letter A indicates how the finished row indicator will appear**



6. Place the IAV LED strip in the locating lugs as shown, with the LED's facing towards the embossed letter A

Installation Guidelines


Step Row Indicator Fitting Instructions

Data Sheet: (sheet 2 of 2) 25/11/2013


Fitting Details *(continued)*




7. Fit the tile flat side down, with the letter turned the correct way

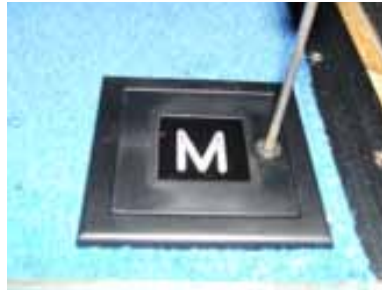

8. Slot the frame into the cutout in the base, then tighten the hex screw

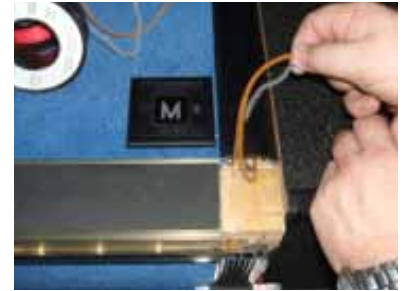

9. Connect the IAV led wires into the supply, red joined into the red and black into the black cables

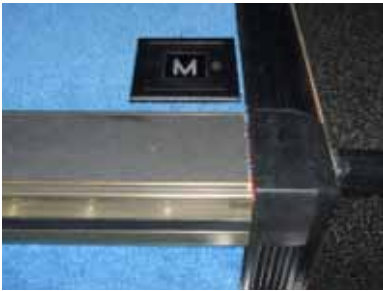

10. The crimped connectors should be inserted into the cable management, and the endcap fixed into the step edging